



Handleiding/ Manuel d'installation
INSTRUCTION MANUAL
-Swing Gate with motor

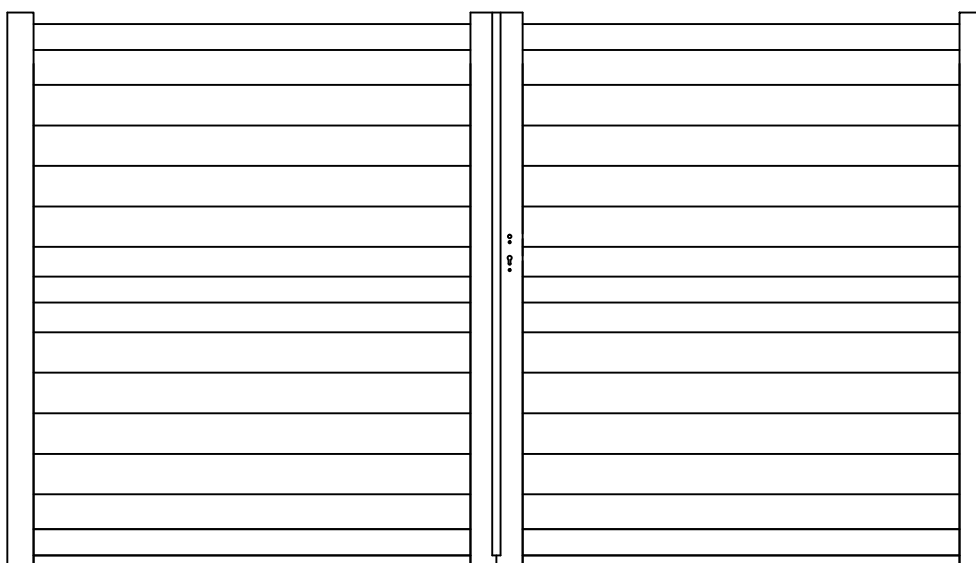




[1]*1


[2]*1

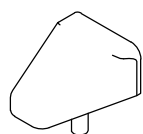


[3]*2

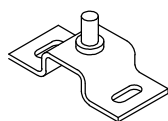

[4]*2

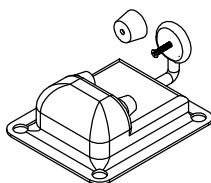

[5]*1

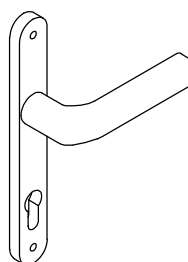

[6]*2



[7]*1



[8]*1



[10]*12




[11]*2




[12]*4



[13]*1

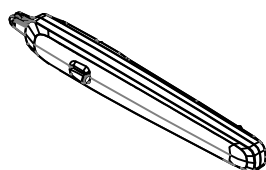

[14]*2

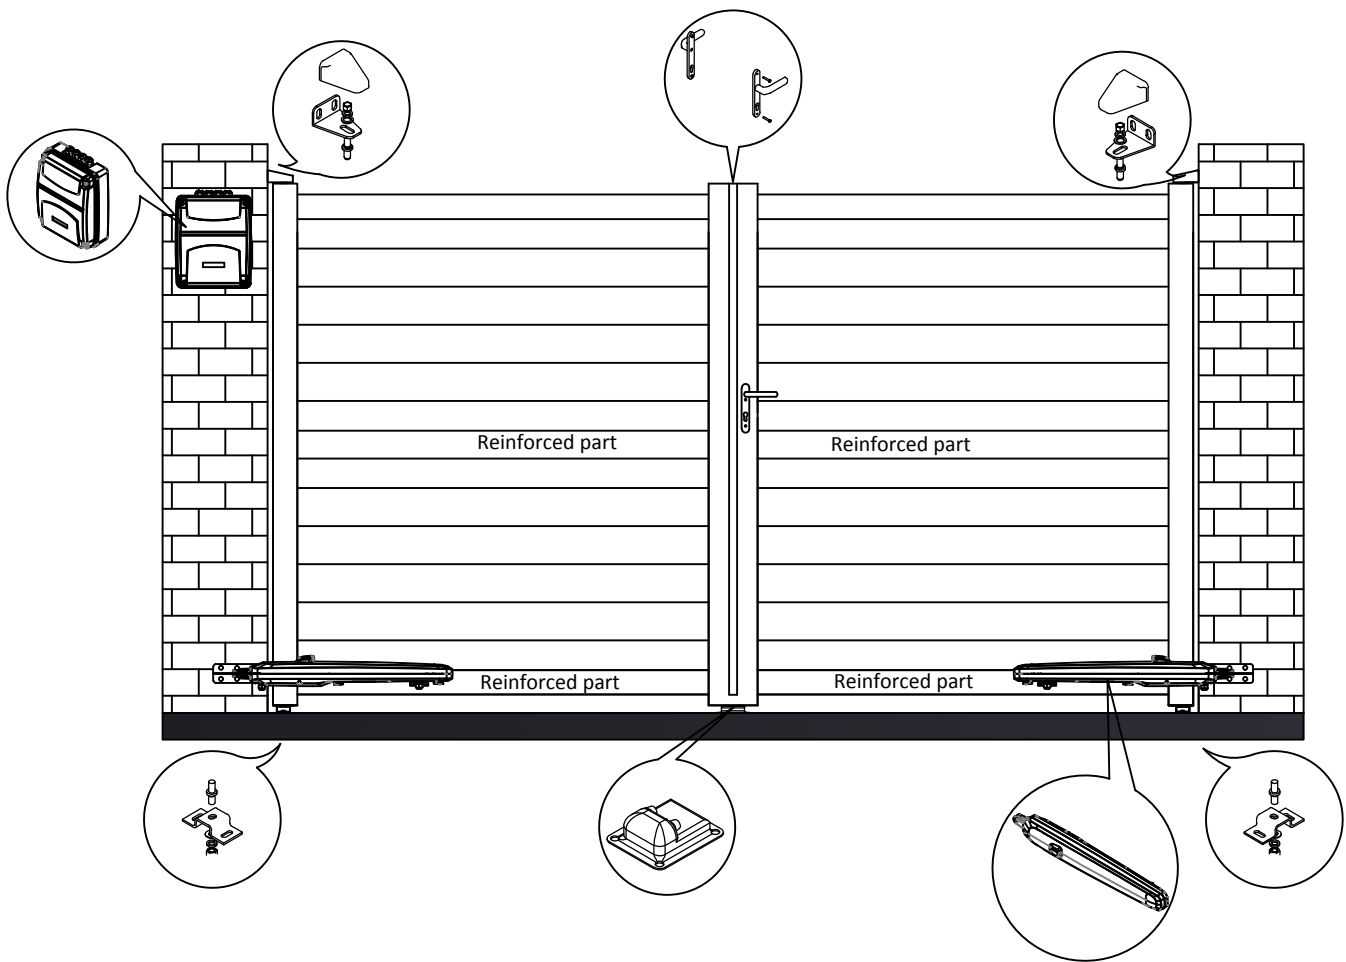

Motor arm needs to be installed on the reinforced part.

